



**POLYCOR**

# MAILBOX POST INSTALLATION GUIDE

There are two common post styles available immediately. All posts weigh approximately 400 pounds each.

## OPTION A

- 7" x 7" x 7'-0"
- Thermal 2 sides, split face 2 sides with standard single-scroll black wrought iron bracket installed on post
- Available in Woodbury Gray

## OPTION B

- 7" x 7" x 7'-0"
- Thermal 2 sides, rock face 2 sides
- Available in Woodbury Gray

Other sizes and styles are available per request.

## OTHER OPTIONS AVAILABLE

- Lettering
- Black aluminum mailbox bracket
- Double-scroll wrought iron mailbox bracket
- Azek mailbox bracket
- Azek mailbox and newspaper bracket
- Double mailbox bracket (fit 2 boxes side-by-side)
- Mail and newspaper box bracket, single-scroll
- Mail and newspaper box bracket, double-scroll
- Black newspaper tube (to be used on newspaper brackets above)
- Mailbox kit
- Black aluminum newspaper box
- "L" shaped mailbox plate bracket (mounts to side of post)
- Azek mailbox post cap
- Delivery: quoted separately







## INSTALLATION

- Bottom of mailbox needs to finish at 40" to 44" above street level. Always check with your local post office to confirm their requirements for height of box, as well as distance from street that post needs to be installed. Each individual postal office may have varying regulations.
- Hole needs to be 30" deep (up and down) and 18" diameter (across hole). Special engraving, hardware, brackets, etc. may require a longer non-stock post to allow enough of the post to be buried in ground for stability. This may also affect hole depth. By law, you must always contact Dig Safe before digging so they can mark any underground utilities before you dig. Call 888-344-7233 (888-dig-safe).
- You must add height of curb to depth of hole, as shown below, if there is curbing at street, i.e., height of curb is 6", hole needs to be 36" deep.
- We will install your post (for an additional fee) into a pre-dug hole of proper dimension. The driver will not dig the hole. The site must be prepared before delivery. Please leave loose fill by the hole for the driver to backfill. The driver will install post plumb and compact hole to grade with available fill.

## MAILBOX INSTALLATION

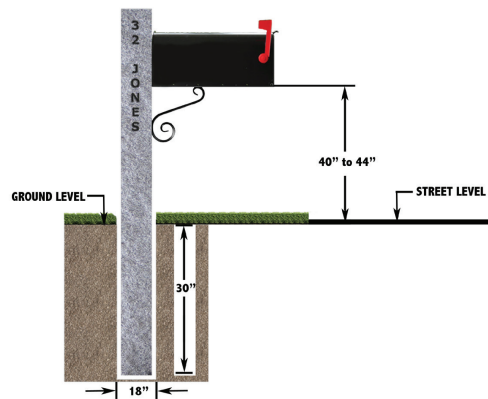

## MAILBOX INSTALLATION WITH CURBING AT STREET

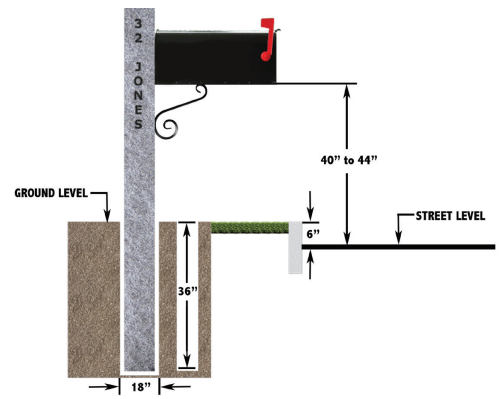

Typical U.S. Postal regulations require the height from the street level to the bottom of the mailbox to be 40" to 44", but please check with your local postmaster for their requirements. A stock-size post would need a hole 30" deep, and 18" diameter. Varying USPS height requirements, as well as any engraving or non-stock accessories added to post may require a longer non-stock post, so that proper mailbox height can be maintained. Before starting any digging projects, state law requires that you contact Dig Safe, 1-888-344-7233 (888-dig-safe).

Any height measurement needs to be from street level, not curb or grade level.